

Pontos principais do Manual Garmin GPSmap 60Cx

gpsmap_60cx.pdf (SECURED) - Adobe Reader

File Edit View Window Help

 
37 (47 of 100) 155%

Tools Sign Comment

MAIN PAGES

The GPSMAP 60Cx has six main pages: Satellite Page, Trip Computer Page, Map Page, Compass Page, Altimeter Page, and the Main Menu. You can cycle through these pages by pressing the **PAGE** key to move forward or pressing the **QUIT** key to reverse. Additional pages are added by using the Page Sequence option on the Main Menu. The Active Route Page appears only when you are actively navigating.

Each page has an Options Menu, which contains the setup options and functions that apply to the page. To view the Options Menu for a page, press the **MENU** key.

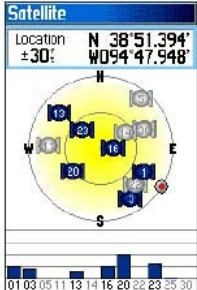

Satellite Page



Satellite Page Options Menu



Trip Computer Page



Trip Computer Page Options Menu



 
Map Page



Map Page Options Menu



Compass Page

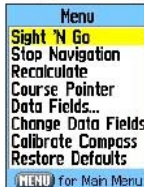

Compass Page Options Menu



Main Menu



 
Main Menu Options Menu

GPSMAP 60Cx Owner's Manual

37

MAIN MENU

The Main Menu contains settings and features not found on the main pages and submenus. The time and date are shown at the bottom of this page. The Main Menu is accessible from any page by pressing **MENU** twice. To select an item on the Main Menu, highlight the menu item, and press **ENTER**.

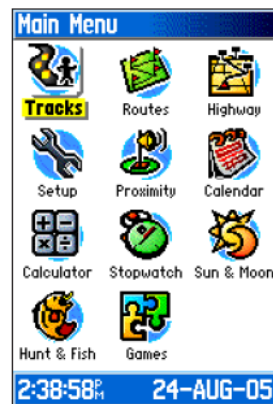

Main Menu



 
NOTE: If a page is added to the sequence, the icon does not appear on the Main Menu.

Tracks


The Tracks Page shows the percentage of track memory used, and a list of saved tracks. Use the Tracks Page to set up, clear, or save a track log, or enable the TracBack feature for the current track log. For more information, see page 27.

To access the Tracks Page:

1. Press **MENU** twice to open the Main Menu.
2. Select the **Tracks** icon, and press **ENTER**.
3. Highlight the **Setup** button, and press **ENTER** to open the Track Log Setup Page.

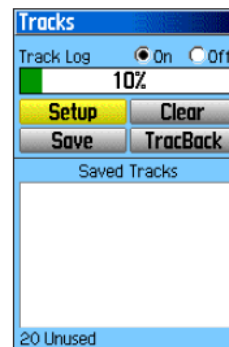

Tracks Page

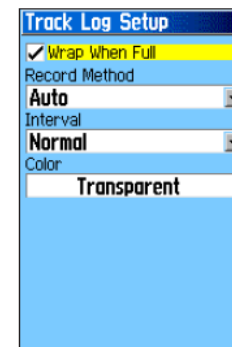 

Track Log Setup

GETTING STARTED

Using the GPSMAP 60Cx Keypad

POWER key

- Press and hold to turn the unit on or off.
- Press and release to adjust the backlighting.

IN/OUT Zoom Keys

- Press to zoom in or out on the Map Page.
- Press to scroll up or down a list on any other page.

FIND/MOB key

 
- Press and release at any time to view the Find Menu.
- Press and hold for MOB*

MARK key

- Press and release at any time to mark your current location.

QUIT key

- Press and release to cancel data entry, or exit a page.

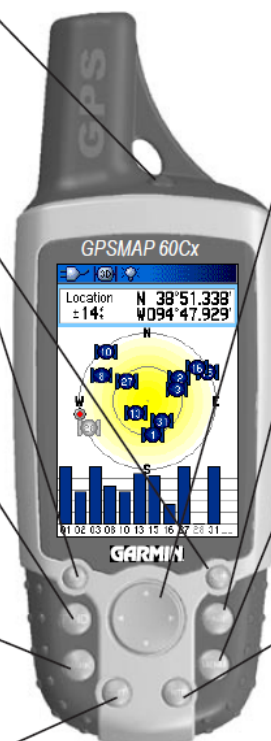

ROCKER key

- Press up, down, left, or right to highlight options; and to enter data, or move the map panning arrow.

PAGE key

- Press and release to cycle through the main pages.

MENU key

- Press and release to view page options.
- Press twice to view the Main Menu.

ENTER key

- Press and release to enter highlighted options, data, or confirm on-screen messages.

* Man Overboard (MOB) feature stores a waypoint and then navigates back to it.